

# Locating the Product Serial Number

## 1 HOTPORT MESH NODES (3000, 6000, 7000, 5020 SERIES)

---

### 1.1 ON THE PRODUCT CASING

- Back of unit  
All models
- Near the AC power port  
6000 and 7000 series outdoor models

### 1.2 IN HOTVIEW PRO (MANAGEMENT SOFTWARE)

- **Mesh Node Inventory** tab after loading the mesh into HotView Pro

### 1.3 Via Telnet (Putty)

- Telnet or SSH to the Mesh IP Address
- Enter **Show**
- Then **Node**
- Then **Config**
- Note the displayed **Serial Number**

## 2 HOTPOINT ACCESS POINTS (4000, 5000 SERIES)

---

### 2.1 ON THE PRODUCT CASING

- Back of unit  
All models

### 2.2 IN HOTVIEW PRO

- **AP Inventory** tab after loading the access point into HotView Pro

## 3 ALL PRODUCTS (FWB, FMC, CPE)

---

Back of unit

FTSERLOOKUP07202015