



The reset button is behind the breather valve, so removal of the breather valve is required in order to reset the 7020 mesh node.

To remove the breather valve: Twist cap (counter-clockwise), do not pop-off. You will need to grab the bottom of the cap, and twist off to remove. The cap is hand tight, so you can use your fingers or a wrench to remove. **DO NOT USE PLIERS**, since you can damage the cap.

Once the cap has been removed:

1. Make sure that at least the Power and Status LEDs are green.
2. Take a paper clip, press and hold the reset button.
3. Watch the Status LED from the time the reset button is pressed.
4. Once the Status LED begins to blink release the reset button.
5. The Mesh node will reboot to its default settings.

FT7020RESETPROC10122014
Rev. 01