

Requirements for Accessing a 5020-LNK

The 5020-LNK should be accessed from a separate mesh. As with any separate mesh, make sure that the following parameters are different/ unique:

1. IP Address,
2. Mesh ID,
3. Mesh Name,
4. ESSID.

FT5020LNKMESHACCESS03152015

Rev. 01